

**Supplied Hardware:** [4] Aluminum riv nuts, [1] Riv nut tool, [4] 5/16 x 2" hex head bolts, [4] 5/16 split lock washers, [8] 3/8 flat washers, [2] 3/8 x 2 1/2" bolts, [2] 3/8 nylock nuts [2] nylon sleeves, [2] 5" x 5" mounting plates.

**BEDSLIDE**  
GET TO IT.




**ALUMINUM BED  
INSTALLATION  
INSTRUCTIONS**

**Tools Needed:** Drill, 7/16" & 1/2" drill bits, permanent marker, tape measure

## STEP 1.

### CENTER BEDSLIDE® IN TRUCK BED.

Place BEDSLIDE® in truck bed and check for tailgate clearance. SEE CAUTION BELOW! Center frame between the wheel wells and leave 1 1/2" clearance space between bulkhead and BEDSLIDE® frame. Once centered, mark mounting holes for drilling. Use pre-punched holes on cab end cross member and holes on the center cross member.

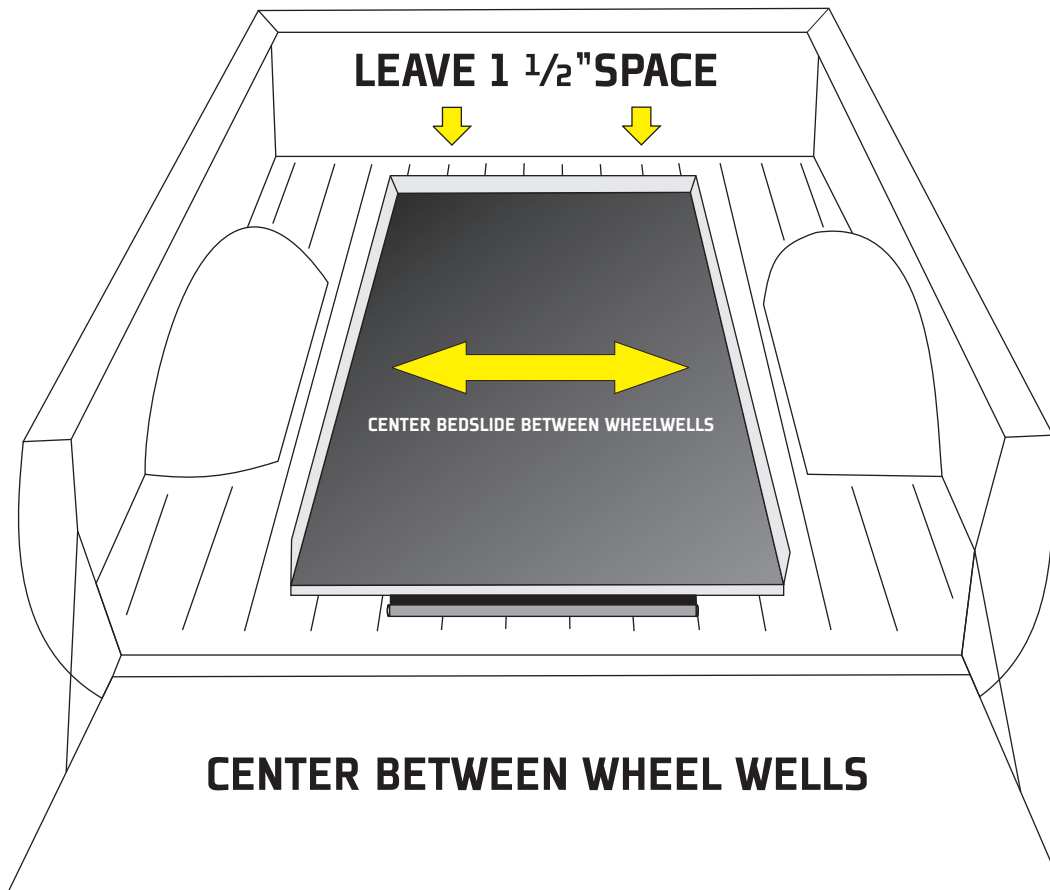


**IF BEDSLIDE® DOES NOT CLEAR TAILGATE YOU WILL NEED LIFT BLOCK KIT PART #FPLB1 TO COMPLETE INSTALLATION.**

## STEP 2.

### DRILL MOUNTING HOLES.

Once centered, slide the unit out past the center cross member. SEE CAUTIONS BELOW!  
Using the pre-punched holes in the cross members that best suit your application, mark and drill [2] 7/16" mounting holes through the bed on the cab end. Then mark and drill [2] 1/2" mounting holes through the bed at the center cross member.

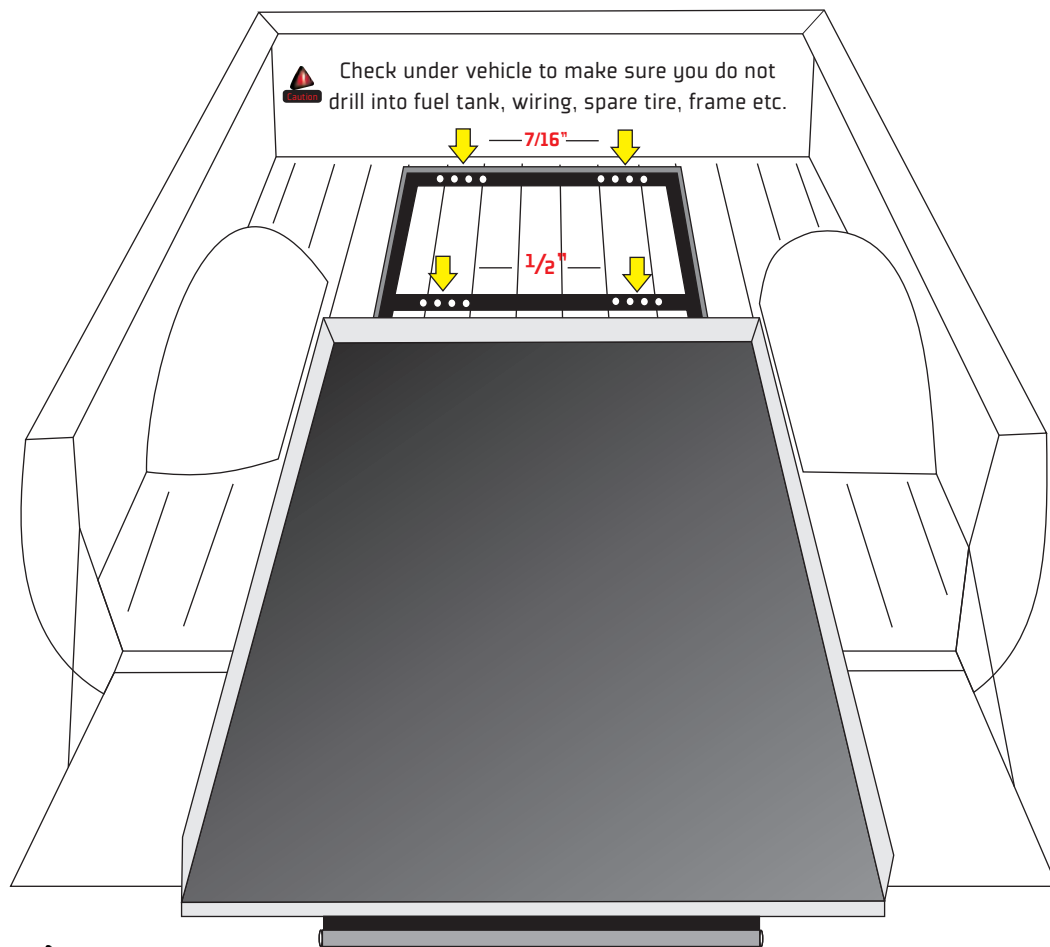


**SLOWLY MOVE UPPER TRAY OUT FROM CLOSED POSITION AND AVOID SHIFTING HOLE PLACEMENT. USE CAUTION WITH NON-MOUNTED BEDSLIDE®**

### STEP 3.

#### INSTALL (2) ALUMINUM RIV NUTS.

Remove the BEDSLIDE® and install (2) Aluminum riv nuts through the (2) holes drilled closest to the front bulkhead of the bed as pictured below. PLEASE NOTE: Holes drilled to the center will not take a riv nut! Insert the (2) nylon sleeves through the two remaining holes in the bed.

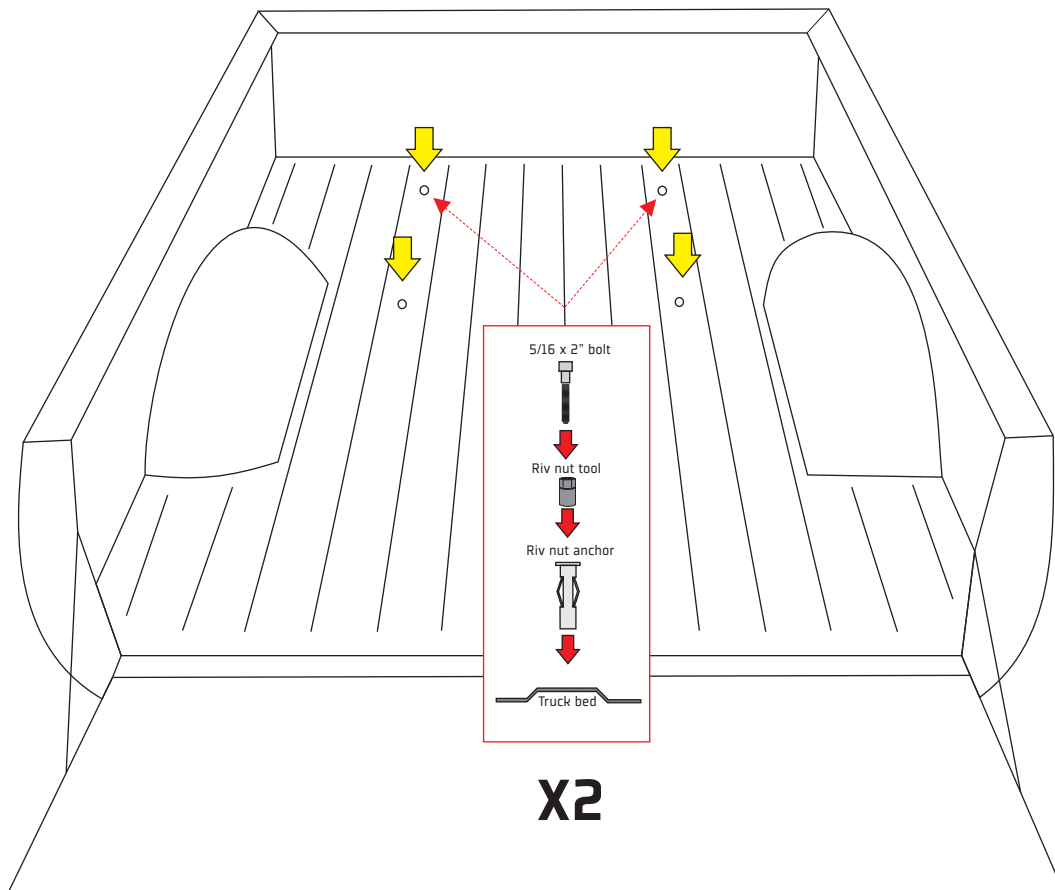


**DO NOT OVER TIGHTEN. DO NOT USE AIR IMPACT TOOLS WITH RIV NUTS!**

#### STEP 4.

#### BOLT DOWN BASE FRAME.

Place BEDSLIDE® in truck bed and extend past the center cross member to access the mounting holes. Bolt unit down at the cab end at each corner using 5/16" x 2" bolts into the flush mounted riv nuts. Next insert 3/8 x 2 1/2" bolts with 3/8 flat washers down center cross member holes and into the nylon sleeves in the bed. Lastly, you will need to attach the supplied 5" x 5" mounting plates to the 3/8 x 2 1/2" bolts from underneath the truck bed and fasten with a 3/8 flat washer and nylon locknut. Tighten nylon locknuts.

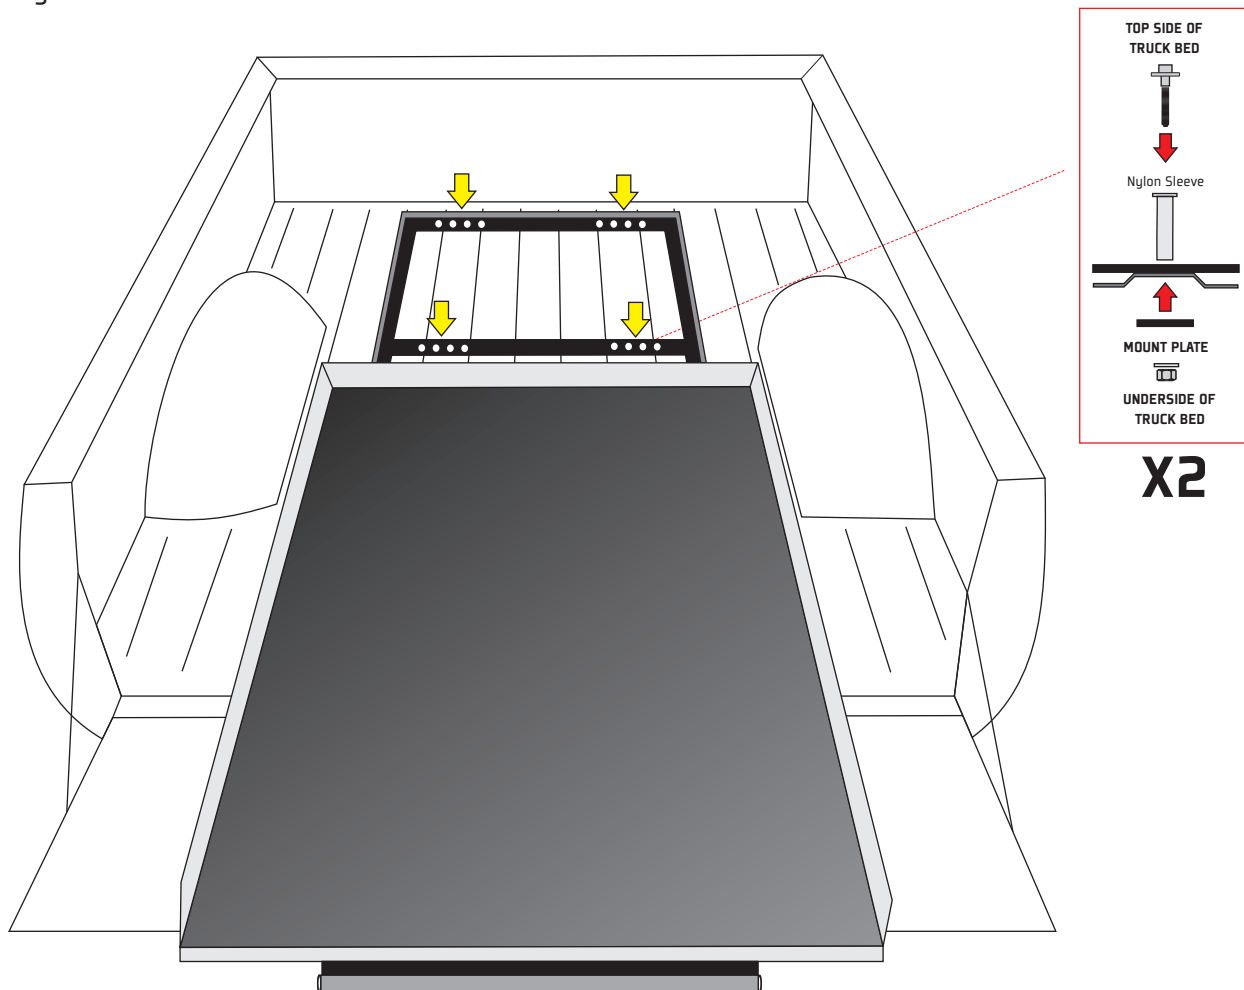

**THAT'S IT! YOUR BEDSLIDE® IS INSTALLED. NOW YOU CAN ACCESS YOUR GEAR SAFELY AND SECURELY. THANK YOU!**