

## START HERE

The goods: [4] 5"x 3"x 1" UHMW blocks,  
[2] 5"x 3"x 1" Foam blocks, [4] 5/16 x 3" bolts

The tools: 1/2" wrench or socket with ratchet

**BEDSLIDE**  
GET TO IT.®




**BEDSLIDE  
LIFT BLOCK  
INSTALLATION  
INSTRUCTIONS**

## STEP 1.

### AFTER INSTALLING THE RIV NUTS INTO THE BED, ACCESS MOUNTING POINTS

Fully extend the unit to access the mounting points on the cross members.

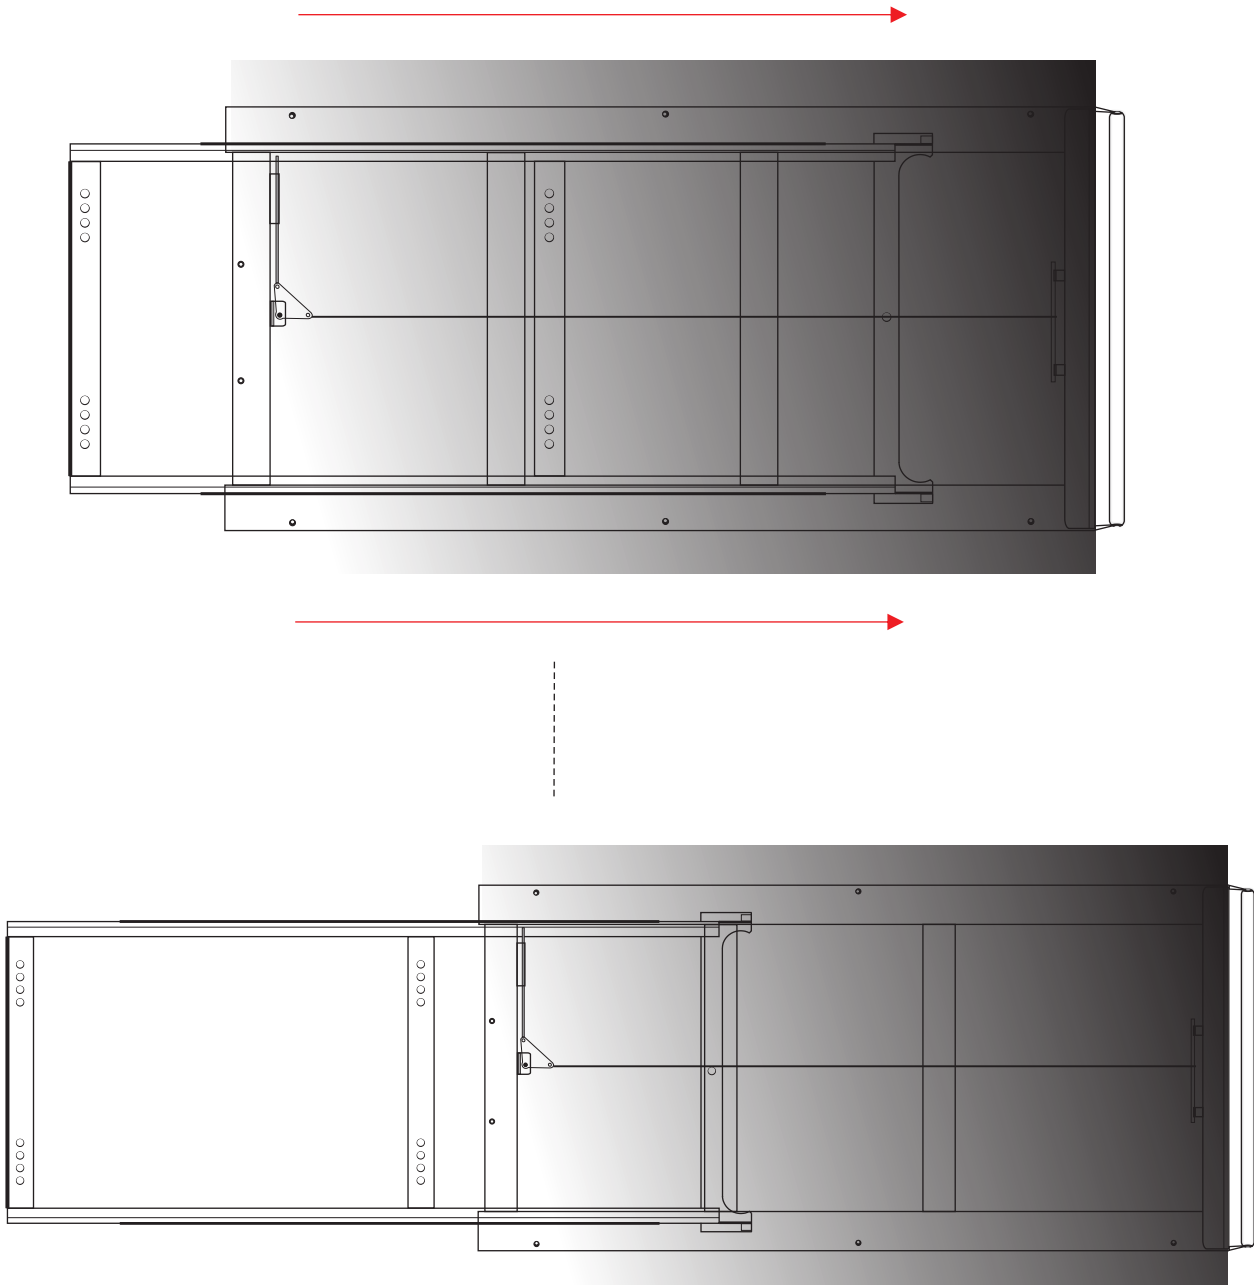

## STEP 2.

### INSERT SPACER BLOCK UNDER EACH MOUNTING POINT

Slide a spacer block under each mounting point as illustrated below. Secure the (4) UHMW spacer blocks closest to the cab with the supplied 5/16 x 3" bolts. PLEASE NOTE: The (2) spacer blocks placed under the tailgate end cross member and will not be secured. Weight of the BEDSLIDE® will keep them in place.

THAT'S IT!! YOUR BEDSLIDE® IS INSTALLED!!

